


FS-G7P

User's Manual

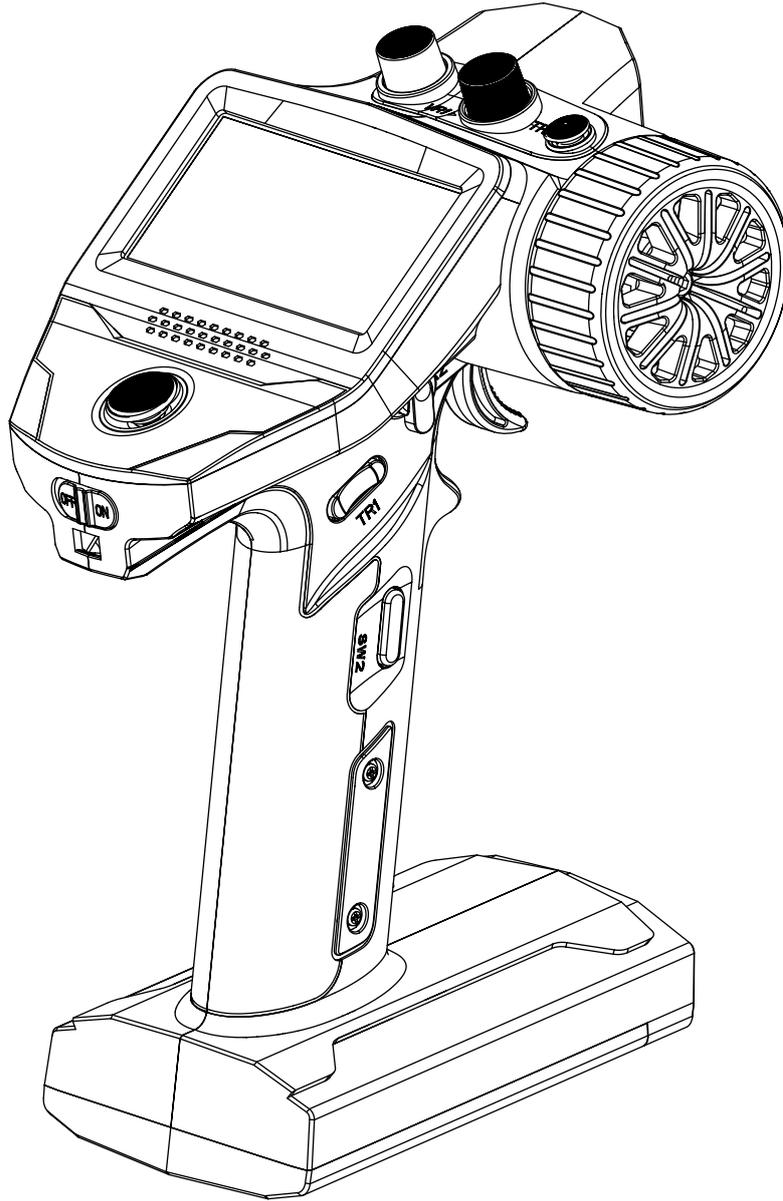

New ANT (Ant protocol) Automatic Frequency Hopping Digital System



Copyright ©2022 Flysky Technology Co., Ltd



WARNING:
This product is only for 15 years
old or above



Thank you for purchasing our company's products! If this is the first time for you to use a transmitter system, you will enjoy a whole new world of fun and subtlety!

To ensure the safety of you and your device, please read the User's Manual carefully prior to the operation.

If you encounter any problems, please check the manual first. If the problem is still not resolved, please contact your local distributor directly or visit the website (www.flysky-tech.com) to contact customer service.

Content

1. Safety	1
1.1 Safety Symbols	1
1.2 Safety Guide.....	1
2. Product Introduction	2
2.1 Transmitter Overview	2
2.2 Receiver Overview	3
2.2.1 Status LED.....	3
2.2.2 Interface.....	3
2.3 Antenna	3
3. Preparation	4
3.1 Installing Transmitter Battery.....	4
3.2 Installing Receiver and Servo.....	4
4. Operation guide	5
4.1 Power-on.....	5
4.2 Bind.....	5
4.3 Setting Transmitter LED and Audio.....	5
4.4 Calibration.....	6
4.5 Restoring Factory Settings.....	6
4.6 Power-off.....	6
5. System Interface	7
6. Function Menu	8
6.1 Settings-Channel Reverse	9
6.2 Settings-Servo Travel.....	9
6.3 Settings-Neutral Trim.....	10
6.4 Settings-Bidirectional Rate.....	10
6.5 Settings-Curve.....	11
6.6 Settings-Smart Vehicle Control (SVC).....	11
6.7 Settings-Beginner Mode.....	11
6.8 Auxiliary Channels-CH3 to CH7.....	12
6.9 Mixing	12
6.10 Mixing-Steering Mix.....	12
6.11 Mixing-Programming Mixes.....	13
6.12 Timer.....	13
6.13 Timer-Timer.....	13
6.14 Timer-Lap List.....	13
6.15 Switch Assignment.....	14
6.16 Receiver Settings.....	14
6.17 Receiver Settings-Failsafe.....	14
6.18 Receiver Settings-Bind Settings.....	15
6.19 Receiver Settings-Range Test.....	16
6.20 Receiver Settings-Sensor.....	16
6.21 Receiver Settings-ESC Settings.....	16
6.22 Receiver Settings-i-BUS Settings FS-CEV04.....	17
6.23 Model	17

6.24 System Settings.....	18
6.25 System Settings-System Settings.....	18
6.26 System Settings-Stick Calibration.....	19
6.27 System Settings-Firmware Update.....	19
6.28 System Settings-Factory Reset.....	20
6.29 System Settings-Help Center.....	20
6.30 System Settings-About.....	20
7. FS-R7P Function Instructions.....	21
7.1 Attentions	21
7.2 Binding.....	21
7.3 Firmware update.....	21
7.4 Failsafe.....	22
8. Product Specifications.....	23
8.1 Transmitter Specification FS-G7P	23
8.2 Receiver Specification FS-R7P	24
9. Packing List.....	25
10. Certification.....	26
10.1 DoC Declaration	26
10.2 CE Warning	26
10.3 Appendix 1 FCC Statement	26
11. Environmentally friendly disposal.....	27

1. Safety

1.1 Safety Symbols

Pay close attention to the following symbols and their meanings. Failure to follow these warnings could cause damage, injury or death.

 Danger	• Not following these instructions may lead to serious injuries or death.
 Warning	• Not following these instructions may lead to major injuries.
 Attention	• Not following these instructions may lead to minor injuries.

1.2 Safety Guide



Prohibited



Mandatory



- **Do not use the product at night or in bad weather like rain or thunderstorm. It can cause erratic operation or loss of control.**
- **Do not use the product when visibility is limited.**
- **Do not use the product on rain or snow days. Any exposure to moisture (water or snow) may cause erratic operation or loss of control.**
- **Interference may cause loss of control. To ensure the safety of you and others, do not operate in the following places:**
 - Near any site where other radio control activity may occur
 - Near power lines or communication broadcasting antennas
 - Near people or roads
 - On any body of water when passenger boats are present
- **Do not use this product when you are tired, uncomfortable, or under the influence of alcohol or drugs. Doing so may cause serious injury to yourself or others.**
- **The 2.4GHz radio band is limited to line of sight. Always keep your model in sight as a large object can block the RF signal and lead to loss of control.**
- **Do not touch any part of the model that may generate heat during operation, or immediately after use. The engine, motor or speed control, may be very hot and can cause serious burns.**




- **Misuse of this product may lead to serious injury or death. To ensure the safety of you and your equipment, read this manual and follow the instructions.**
- **Make sure the product is properly installed in your model. Failure to do so may result in serious injury.**
- **Make sure to disconnect the receiver battery before turning off the transmitter. Failure to do so may lead to unintended operation and cause an accident.**
- **Ensure that all motors operate in the correct direction. If not, adjust the direction first.**
- **Make sure the model stays within the systems maximum range to prevent loss of control.**


2. Product Introduction

This product uses the 2.4 GHz ANT **Ant Protocol** enhanced automatic frequency hopping digital system, consisting of FS-G7P transmitter and FS-R7P receiver. It has an output of 7 channels, compatible with model cars, boats, etc.

2.1 Transmitter Overview

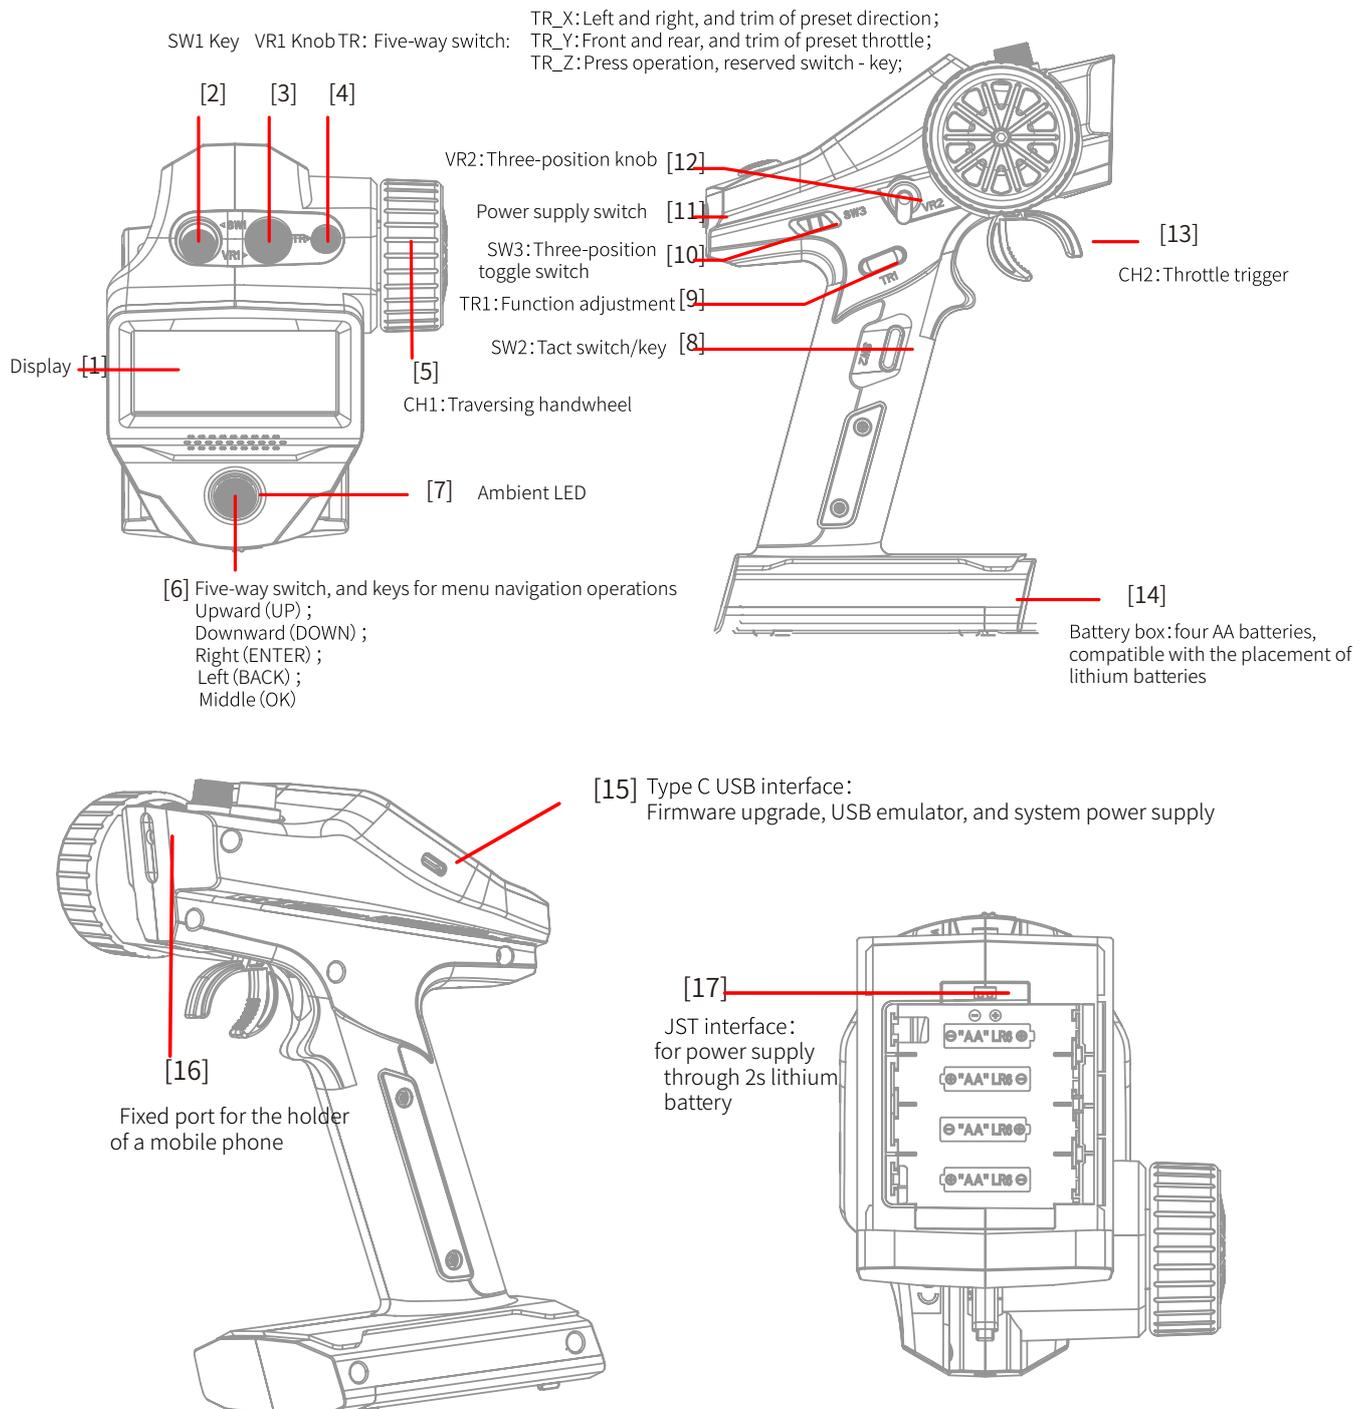

2.2 Receiver Overview

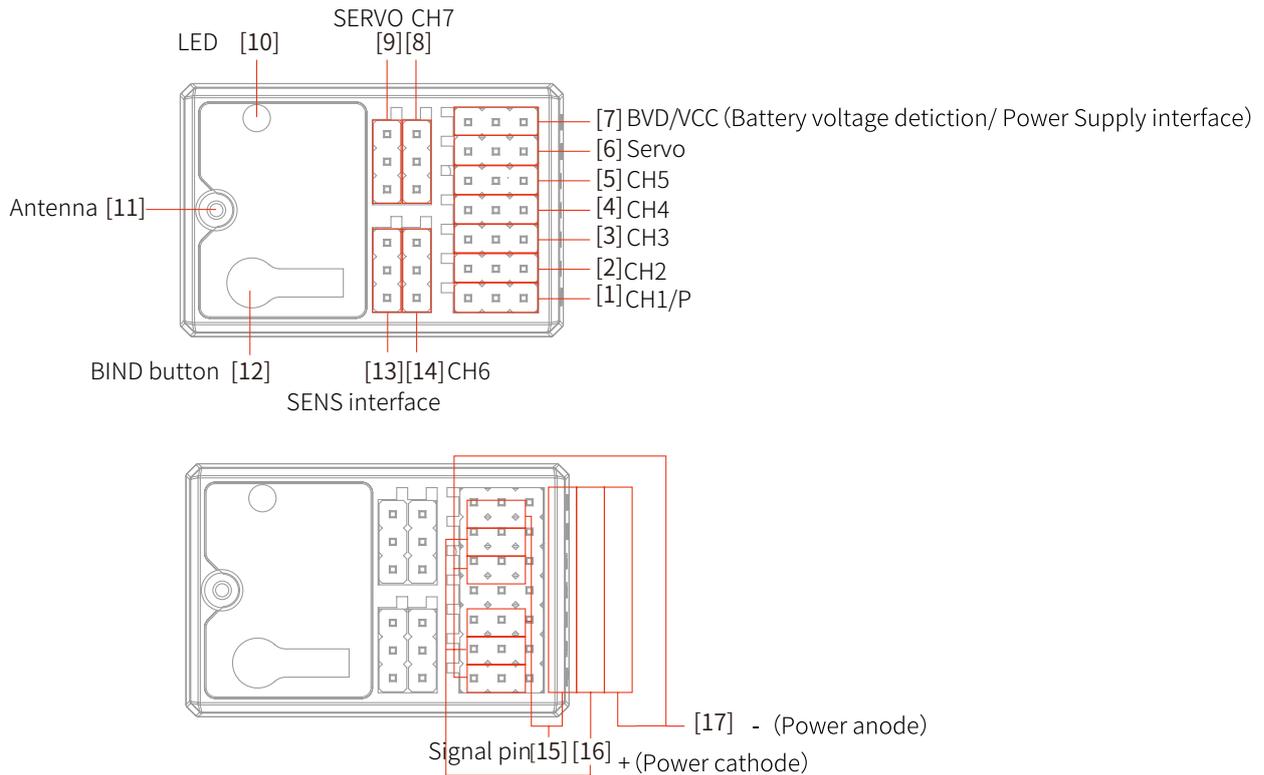

2.2.1 Status LED

The status LED indicates the power supply state of the receiver and its working state.

Off: The receiver is not powered on.

Light on in red: The receiver is connected to the power supply. It works normally.

Fast flashing: The receiver is in the bind state.

Slow flashing: The transmitter flashes slowly in case of power-off, no bind, or no signal.

2.2.2 Interface

All the interfaces are 2.54 mm standard pins for connecting the receiver to each terminal part of the model. Please follow the direction according to the label **see the label direction on the side of the receiver.**

2.3 Antenna

It should be noted that this is a transmitter with a built-in antenna. Please use the transmitter correctly.

 Caution	<ul style="list-style-type: none"> It is strictly prohibited to hold the antenna of the transmitter and the antenna of the receiver in operations. Otherwise, the quality and strength of the radio transmission signal will be greatly reduced, resulting in the failure and out of control of the model.
 Note	<ul style="list-style-type: none"> To ensure the signal quality, the transmitter and receiver antennas should be kept vertical to the ground as much as possible. In operations, please adjust the transmitter angle. Make the antenna towards the direction of the model receiver. Keep the receiver antenna extending out of the model and perpendicular to the ground.
 Note	<ul style="list-style-type: none"> Do not pull the antenna of the receiver. Do not tie the antenna and the servo cable together. Do not put the antenna close to the metal materials, because this will affect the signal strength of the receiver.

3. Preparation

Prior to operations, please install the battery and connect devices according to the sequence and guide as described in this chapter.

3.1 Installing Transmitter

 Danger	• Only use specified battery (X4 AA batteries).
 Danger	• Do not open, disassemble, or attempt to repair the battery.
 Danger	• Do not crush/puncture the battery, or short the external contacts.
 Danger	• Do not expose to excessive heat or liquids
 Danger	• Do not drop the battery or expose to strong shocks or vibrations.
 Danger	• Always store the battery in a cool, dry place.
 Danger	• Do not use the battery if damaged


Battery type: AA batteries or 2S lithium batteries JST interface inside the battery compartment.

Please follow the steps below to install the transmitter batteries:

1. Open the battery compartment cover.
2. Put 4 AA batteries with sufficient electricity into the battery compartment. Ensure that the metal terminals on the batteries contact the metal terminals inside the battery compartment.
- You should choose the proper size of 2S 7.4V lithium battery to access the JST interface. Connect them correctly.
3. Cover the battery compartment.

3.2 Installing Receiver and Servo

Install the receiver and servo in the following methods:

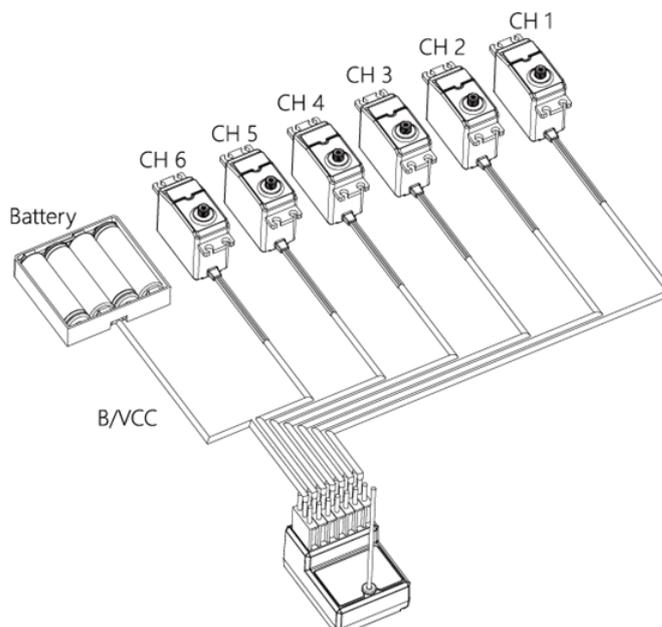

4. Operation guide

After the preparation is completed, you can start to use the product according to the guide in this chapter.

4.1 Power-on

Power on the product according to the following steps:

1. Check the system status to make sure the battery is fully charged and properly installed.
2. Turn the switch to the [On] position. The screen will light up.
3. Power on the receiver.

 Warning	• At this point, the system starts. Please operate carefully. Otherwise, it may cause damage to the product or injury to people.
--------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------

 Warning	• For your safety, please turn the transmitter switch and throttle to the safe position.
--------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------

4.2 Bind

The ex-factory bind settings of the transmitter and receiver are completed successfully.

If you need to replace the transmitter or receiver with another one, please follow the steps below for binding:

1. Connect the power cable to the VCC/BVD interface on the receiver. At this time, the receiver indicator flashes slowly;
2. Press and hold the BIND key on the receiver for more than 3 seconds or press and hold the BIND key on the receiver for power-on.
3. Power on the transmitter and set the receiver. In the bind settings, select the bind start. At this time, the system is in binding;
4. After the bind is successful, the receiver LED is always on, and the transmitter automatically exits the bind state;
5. After the bind is completed, you can use it normally.

• The procedure is applicable to the bind between only FS-G7P transmitter and FS-R7P receiver. The bind methods vary with receivers. For details about the operations, you can visit the FLYSKY official website to obtain the receiver manual or other related information.

• Since the product is constantly updated, please visit the FLYSKY official website to obtain the latest transmitter and receiver compatibility list.

This product system is compatible with most of our ANT **Ant Protocol** receiver models. The details are as follows:

RF standard: 2.4 GHz **ANT protocol**

Receiver model: FS-R7P

4.3 Setting Transmitter LED and Audio

This LED is a monochromatic light. You can set the ON and OFF state. You can enable or disable the audio for the system operations and alarms. For system operations and alarms, you can enable/disable the audio separately or collectively. In addition, you can set the audio volume separately.

Please follow the steps below to perform the settings:

1. Start the transmitter and enter the system menu. In the system settings, set the LED, audio, and volume.
2. After the settings are completed, return back.

4.4 Calibration

The calibration is required in case of data offset of the transmitter due to physical wear in long-term operations. At this time, we need to calibrate the output data and neutral angle of the traversing handwheel, throttle trigger, and VR2.

The transmitter has been calibrated at the factory. If you need to recalibrate it, please follow the steps below: Please follow the steps below to perform the settings:

1. Power on the transmitter, enter the system menu, and select the stick calibration function. Follow the prompts to press the Start key for calibration.
2. Swing the handwheel and trigger to the maximum and minimum travel in each direction respectively and then release them. Toggle the VR2 left and right repeatedly to the maximum extent for two or three times. Finally, toggle the VR2 back to the middle position.
3. Press the return key to exit the calibration interface. The calibration is complete.
 - If the pop-up window indicates that the calibration has failed, it means that the control to be calibrated has not reached the maximum and minimum travel, or VR2 has not been toggled to the middle position. The re-calibration is required.

4.5 Restoring Factory Settings

When you want to clear the data in the transmitter, you can restore all data in the transmitter to default values. That is, all model data and settings are restored to the default state.

Please follow the steps below to restore factory settings:

1. Power on the transmitter, enter the system menu, and select the factory reset function. Follow the prompts to press the OK key to start the reset.
2. After the successful reset, the system automatically returns and stays in the system menu interface. It indicates that the system has been restored to the factory settings.

4.6 Power-off

Please follow the steps below to power off the system:

1. Power off the receiver.
2. Turn the switch to the [OFF] position to turn off the transmitter.




Caution

- **When you shut down the system, make sure to power off the receiver, and then the transmitter. Otherwise, the model may be damaged and people may be injured.**

5. System Interface

Main system interface


Enter the main system interface after power-on.

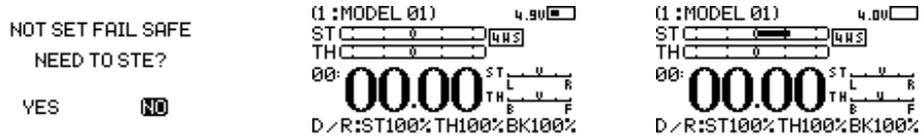

[1]	Model name and number	[6]	Signal and strength
[2]	Direction channel output display	[7]	Transmitter voltage and display
[3]	Throttle channel output display	[8]	Direction trim display
[4]	Timer	[9]	Throttle trim display
[5]	DR output display		


Sub-page 1

After power-on, enter the main system interface and press the UP key. Press the return key to return to the main system interface.

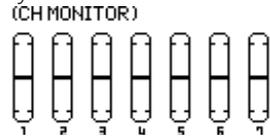

Sub-page 2

After power-on, enter the main system interface and press the DOWN key. Press the return key to return to the main system interface.




6. Function Menu

Function description:

In this transmitter, we have classified the functions and made a new layout. There are 8 categories in icons in total. That is:

Setup, Auxiliary Channel, Mixing, Timer, Switch Assignment, Receiver Settings, Model, System Settings.
After the classification, it will become more convenient and easy to set up the model.



Setup



(SET)	REU	BEGINNER
	EPA	
	SUB TR	
(D/R)	D/R	
(CURVE)	CURVE	
(SUC)	SUC	



Auxiliary Channel



(AUX.CH)	
	CHANNEL 3
	CHANNEL 4
	CHANNEL 5
	CHANNEL 6
	CHANNEL 7



Mixing



(MIXES)	
	ST MIXING
	MIX1
	MIX2
	MIX3
	MIX4
	MIX5



Timer



(TIMER)	
	TIMER
	LAP LIST



Switch Assignment




(SW ASSIGN)		
	KNOB SW1	FUN :OFF
	SW2	DIR :NOR
	TRIM SW3	
	TR-2	



Receiver Settings



Model

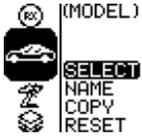

System Settings



Function operations:

In the main interface, press the OK key to enter the function menu. Select the function category by pressing the UP/DOWN key. Press the OK key to enter the corresponding next-level menu.

6.1 Settings-Channel Reverse:


Function: Perform the reverse processing of the output data of one channel or more channels. This function is used in debugging the model.

Application: When the model is designed, there may be no way to determine the unified standard. When we assemble and debug a model, we find that the operation model is reversed to our requirement. For example, the model moves left when we want it to move right. At this time, the transmitter signal output needs to be adjusted. The channel reverse function is used to adjust the action direction of each servo or motor and output signals.

Function settings:

1. In the setting menu, select the channel reverse function menu and press the OK key to enter
2. Select the channel you need to adjust by the pressing UP/DOWN key. Press the OK key to enter the edit state. Then adjust it by the pressing UP/DOWN key. Press return after adjustment.
3. Test the function to confirm all the servo or motor action direction is the same as the actually expected direction.

(REVERSE)



6.2 Settings-Servo Travel:

Function: Adjust the travel amount of the servo output. This function is used in debug. This function can be used to set the travel of the left and right up/down/H/L at both ends of the channel respectively.

When the model is designed, there are changes in the size of the structure and the specification may not be unified. In addition, there may be different sizes of operator's habitual actions. The servo travel function can be used to set the travel amount required for each channel to adjust the corresponding structure for the best match, to obtain the required operation effect. For example: You want to operate that the turning action is not so large, you can adjust the value of the direction channel at both ends to be smaller. In this way, the turning action should be smaller, with less likely to be tailspin.

Function settings:

1. In the setting menu, select the servo travel function menu and press the OK key.
2. Select the channel you need to adjust by the pressing UP/DOWN key. Press the OK key to enter the edit state. Then adjust it by the pressing UP/DOWN key. Press return after adjustment.
3. Test the function to confirm all the servo or motor action directions are the same as the actual expected travels.

(END POINT ADJUST)

```
ST : L 100 R 100
TH : B 100 F 100
CH3 : L 100 H 100
CH4 : L 100 H 100
CH5 : L 100 H 100
```

6.3 Settings-Neutral Trim:

Function: Set and adjust the neutral data of each channel.

This function is mainly used for the trim of the model in assembly and debugging. For example, the vehicle is stationary and the transmitter traversing handwheel is in the neutral position; if you find that the wheels deviate from the straight direction, it can be easily corrected through this function. At this time, it is difficult and inconvenient to adjust the model structure.

Note: Before setting this function, make sure that the channel is moving in the correct direction.

Function settings:

1. In the setting menu, select the neutral trim function menu and press the OK key.
2. Select the channel you need to adjust by the pressing UP/DOWN key. Press the OK key to enter the edit state. Then adjust it by the pressing UP/DOWN key. Press return after adjustment.
3. Observe and test the function to ensure that the settings work as expected.

(SUB TRIM)

```
ST : L 000
TH : B 000 CH5: L 000
CH3 : L 000 CH6: L 000
CH4 : L 000 CH7: L 000
```

6.4 Settings-Bidirectional Rate:

Bidirectional rate allows you to quickly adjust the output value of certain channels to achieve the best manipulation effect. The rate function can be used to set the direction channel channel 1, throttle channel channel 2 upper, brake channel 2 lower channel, and output data rate. The range is 0-100%. You can also set the switch-on and switch-off. The two control modes can be switched through the application switch setting see the Key Setting menu.

Function settings:

1. In the setting menu, select the bidirectional rate function menu and press the OK key.
2. Select the channel you need to adjust by the pressing UP/DOWN key. Press the OK key to enter the edit state. Then adjust it by the pressing UP/DOWN key. Press return after adjustment. In the adjustment, observe by operating the corresponding channel handwheel and throttle trigger.
3. Test the function to confirm that all channel outputs operate normally as expected.

(DUAL RATE)

ST RATE : 100% USE : OFF
 TH RATE : 100% USE : OFF
 BK RATE : 100% USE : OFF
 ST 

6.5 Settings-Curve:


Curve function is used to set the output data curve adjustment of the direction channel channel 1, throttle channel channel 2 upper, and brake channel 2 lower channel. The range is -100 to +100. It can change the output sensitivity of each channel. When the data is bigger, the sensitivity of the middle position is bigger and the two end positions are smaller. It is vice versa when the data is smaller.

Function settings:

1. In the setting menu, select the curve function menu and press the OK key.
2. Select the channel to be adjusted by pressing the UP/DOWN key. Press the OK key to enter the edit state. Select the EXP by pressing the UP/DOWN key and press the OK key. Then press UP/DOWN key to adjust the data. After adjustment, press the return key. If you need to enable this function, select the application item by pressing the UP/DOWN key, and press the OK key to enter the edit state. Press UP/DOWN key to switch on. Then press the return key.
3. Test the function to confirm that the adjusted channel output operates normally as expected.

(CURVE)

ST CURVE	EXP :	L	R
TH CURVE	0%		
BK CURVE	USE :		
	OFF		



6.6 Settings-Smart Vehicle Control (SVC):

The Smart Vehicle Control function is used to set the receiver with the SVC function. The current FS-R7P does not have the SVC function.

(SVC)

RX NOT CONNECT OR
NOT SUPPORT SVC!


6.7 Settings-Beginner Mode:

The beginner mode function is used to set the output limit of direction channel and throttle channel. After this function is enabled, the channel output is only 50%. In this way, the beginner can easily drive the vehicle under the condition of limiting the speed and turning angle.

Function settings:

1. In the setting menu, select the beginner function menu and press the OK key.
2. Select the item you need to adjust by pressing the UP/DOWN key. Press the OK key to enter the edit state. Then adjust it by pressing the UP/DOWN. Press return after adjustment.
3. Test the function to confirm that all channel outputs operate normally as expected.

(BEGINNER)

USE : ON
 ST : ON 
 TH : ON 

6.8 Auxiliary Channels-CH3 to CH7

For some models with complex functions, we provide up to 7 channels of output, 5 of which are auxiliary channels for the most effective control of multiple functions in different ways. The Auxiliary Channels function is used to set the control settings for CH3 to CH7, assigning targeted controls to the channels for operation.

Function settings:

1. In the auxiliary channel menu, select CH3 to CH7 and press the OK key.
2. Select the item you need to adjust by pressing the UP/DOWN key. Press the OK key to enter the edit state. Then adjust it by pressing the UP/DOWN. Press return after adjustment.
3. Test the function to confirm that all channel outputs operate normally as expected.




6.9 Mixing

Mixing is enabled for some models that require two channels to act in conjunction with each other. The Mixing channel function provides 1 steering mix plus 5 programmable mixes.

Function settings:

In the main interface, press the OK key to enter the function menu. Select the mixing menu by pressing the UP/DOWN key, and press the OK key to enter the edit state.

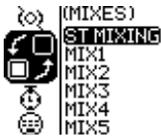

6.10 Mixing - Steering Mix

This is a special function mixing. The Steering Mix provides two types of mixing, that is, track-specific mixer and 4WS mixer.

The 4WS mixer provides 4 different schemes for front and rear wheels to meet the different requirement scenarios for different vehicles.

Function settings:

1. In the mixing menu, select the Steering Mix and press the OK key.
2. Select the item you need to adjust by pressing the UP/DOWN key. Press the OK key to enter the edit state. Then adjust it by pressing the UP/DOWN. Press return after adjustment.
3. Test the function to confirm that all channel outputs operate normally as expected.



6.11 Mixing-Programming Mixes

The programming mixes function is used to mix the output data of any channel to another channel in a certain rate, to achieve a desired mixing effect.

Function settings:

1. In the mixing menu, select a programming mix and press the OK key.
2. Select the item you need to adjust by pressing the UP/DOWN key. Press the OK key to enter the edit state. Then adjust it by pressing the UP/DOWN. Press return after adjustment.
3. Test the function to confirm that all channel outputs operate normally as expected.

```
(MIXES1)
USE:00
MASTER:DIR HIGH :100%
SLAVE :CH3 LOW  :100%
OFFSET:0%
M  ┌───┴───┐
S  ┌───┴───┐
```

6.12 Timer

Timer menu provides two functions: timer and lap list.

Function settings:

In the main interface, press the OK key to enter the function menu. Then select the timer menu by pressing the UP/DOWN key. Press the OK key to enter the edit state.

6.13 Timer – Timer

The Timer function is used for timing in races, including counting, countdown, and lap counting. You can also use it to test a tank of fuel or a full battery and confirm the usage time. In the alarm parameter setting, you can set the alarm prompt time when the timer starts. For example, set to 05M00S. This means the alarm will start when the countdown reaches 5 minutes.

Function settings:

1. In the timer menu, select the timer and press the OK key.
2. Select the item you need to adjust by pressing the UP/DOWN key. Press the OK key to enter the edit state. Then adjust it by pressing the UP/DOWN. Press return after adjustment.
3. Test the function to confirm that all setting outputs operate normally as expected.

```
(TIMER)
00:00.00
TYPE :UP      TH:OFF
ALARM:00 05M:00S
START   RESET
```

6.14 Timer-Lap List

The data display page is available only when you use the lap counting function. You can view the entire duration, the fastest lap time, and the average lap time. Thus, you can easily judge and adjust the operation to finally achieve a good result. The start and stop of the lap time can be set through the Key Setting menu see Key Setting menu for details.


```
(LAP LIST)      1/21
ALL :00:00:00
AVG :00:00:00
001 :00:00:00 *
002 :00:00:00
003 :00:00:00
```

6.15 Key Settings

The key setting function is to assign switches to some functions in order to control the output of the actions needed through the specified switch. According to the types, it includes trim, switch, and knob.

Function settings:

1. In the switch assignment menu, select the key settings and press the OK key.
2. Select the item you need to adjust by pressing the UP/DOWN key. Press the OK key to enter the edit state. Then adjust it by pressing the UP/DOWN. Press return after adjustment.
3. Test the function to confirm that all channel outputs operate normally as expected.

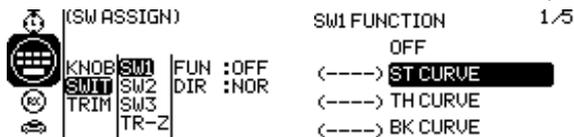

6.16 Receiver Settings

The receiver setting menu provides a number of function setting menus to allow you to set up the receiver system in all aspects. That is, failsafe, bind settings, range test, sensor, ESC settings, and i-BUS settings.

Function settings:


In the main interface, press the OK key to enter the function menu. Select the receiver setting menu by pressing the UP/DOWN key. Press the OK key to enter the function setting interface.



6.17 Receiver Settings-Failsafe:

Failsafe is an important safety setting. It can be used to protect the model from loss or reduce the degree of loss when the receiver loses signal without control. In addition, it plays a role in protecting personnel safety.

You can set the data in case of loss of control for all output channels. There are three output states. If the state is not set, the output is low level state. It is mainly for giving you a reminder. The no output state is also an output of a low level, that is, no signal state. If the output is set, there is the corresponding output according to your requirements. The specific mode settings depend on the terminal device and operation requirements. For example, some governors take no signal as the stop signal. If the out-of-control receiver needs to output a low level no signal, the governor will enter the protection. Another example: If it is an engine, we need to output a brake signal to the brake servo if it is out of control, we need to set that there is an output and it is in the brake state.

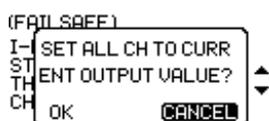

Function settings:

1. In the receiver setting menu, select the failsafe by pressing the UP/DOWN key. Press the OK key to enter the function setting.
2. Select the item you need to adjust by pressing the UP/DOWN key. Press the OK key to enter the edit state. Then adjust it by pressing the UP/DOWN. Press return after adjustment.
3. Test the function by powering off the transmitter to confirm that all channel outputs operate normally as expected.

```
(FAILSAFE)
I-BUS / PPM / PWM : 0N
ST   : R0%
TH   : B0%
CH3  : H0%
```

6.18 Receiver Settings - Bind Settings:

The transmitter and the receiver have been bound with each other before delivery and can be operated directly. If you want to replace the receiver, you need to bind the new receiver with the transmitter by using the binding function before they can be operated normally.

Four parameters - RF type, receiving type, output mode, response speed - and a BIND key are provided for setting purpose.

RF type: There are two options available, ANT1WAY one-way and ANT2WAY two-way. If you are using a two-way receiver, it is recommended to select ANT2WAY two-way, which may bring you a better experience with more information feedback.

ANT1WAY means a one-way mode. In this mode, only the transmitter gives commands to the receiver; while the receiver outputs and performs commands received from the transmitter. The advantage is that it can ensure simultaneous operation by more users on the same site with less interference.

ANT2WAY means a two-way mode, which enables intercommunication between the transmitter and the receiver to be configured with the corresponding functions, so that the basic information of the model can be provided to the user in real time. For example, if you want to know the battery voltage of the model vehicle, you can enable this option and bind the receiver configured with this function, then you can read the battery voltage value on the transmitter.

Receiver type: Two options are available, namely standard receiver and two-in-one receiver, which can be selected according to the receiver you are using. The option of two-in-one receiver means a receiver configured with a ESC; however, standard receivers are supplied by default. For details, please visit our website to learn more about relevant models.

Output mode: There are four optional output modes (combination of two output modes), i.e., PWM/SBUS, PPM/IBUS, PWM/IBUS, PPM/SBUS four output modes, which can be selected according to actual needs.

Servo frequency: There are three optional output modes, i.e., analog, digital and others, which can be selected according to the type of servo. The digit following each option is used to set the frequency of the servo output.

Note: The frequency of analog servos, digital servos and other servos are 60HZ, 380HZ and 50HZ-400HZ respectively.

Function settings:

1. In the Bind Setting menu, select the item to be adjusted by pressing the UP/DOWN key and press the OK key for editing. Set the desired value by pressing the UP/DOWN key and press the OK key to confirm the adjustment.
2. After the adjustment and setting are completed, select Start by pressing the UP/DOWN key and press the OK key to bind with the receiver. For details, please refer to the chapter for binding operation and the Quick Start Guide.

3. After finishing the above step, carry out a test to confirm that all channel outputs are functioning as expected.

```
(BIND)
RF STD   : ANT1WAY
RX TYPE  : STANDARD
OUTPUT   : PWM/IBUS
FREQUENCY: ANALOG
BINDING  : START
```

BINDING...



6.19 Receiver Settings - Range Test:

As an important function, it is recommended to conduct the range test before each operation to check whether the remote controller is functional or environmental conditions are normal.

Working principle: It is aimed to conduct a narrow-ranged test by actively reducing the power of the transmitter, in order to realize quick inspection of the transmitter system and the environment. There are three parameters (power, signal, RSSI) displayed and indicated on the transmitter interface.

Function settings:

1. In the Range Test menu, directly press the SW2 key to conduct the test.
2. You should keep the transmitter still during the test, but you can move your model at this time. If there is no problem in the test within a certain range, the device can be used normally.

```
(RANGE TEST)
PRESS SW2 TO REDUCE!
POWER:DEC
SIG :NULL
RSSI :NULL
```

6.20 Receiver Settings - Sensor

As an interesting feature for two-way communication systems, sensors can be used to send back some information you need through the receiver.

Our transmitter can support up to 15 different types of returned data to provide you with the feedback of seven basic parameters, i.e., TX voltage, RX voltage, BVD voltage, signal intensity, noise, noise ratio and RSSI. BVD: detect an external power supply. It is recommended to use this function to monitor the battery voltage and give an alarm in case of a failure.

Function settings:

In the Sensor menu, scroll pages by pressing the UP/DOWN key to check relevant information.

```
(SENSOR)
ID  TYPE  VALUE
0  TXVOL  5.0V
```

⬆

6.21 Receiver Settings - ESC Settings

The ESC Setting menu is an additional option provided specially for FLYSKY two-in-one ESC, which is used to set the two-in-one governor more precisely to ensure its optimal performance. To enable this setting, you need to switch the receiver type to the two-in-one option in the Receiver settings - Bind Setting menu.

Three parameters, namely operating mode, battery type, and drag braking force can be setup here.

There are two braking modes as follows: the first mode is FOR/BRK/REV that means, the device moves forward when pressing the trigger for acceleration; it is braked when pulling the trigger backward and then reverses when releasing the trigger to the neutral position and then pulling it backward again; and the second mode is forward/reverse that means, the device moves forward when pressing the trigger for acceleration, and it reverses immediately when pulling the trigger backward. These two modes can be set according to actual needs.

Function settings:

1. In the ESC Setting menu, select the item to be adjusted by pressing the UP/DOWN key and press the OK key for editing. Set the desired value by pressing the UP/DOWN key and press the OK key to confirm the adjustment.
2. After that, carry out a test to confirm that all set channel outputs are functioning as expected.

(ESC SETTING)

```
MODE : FOR/BRK/REV
BAT TYPE: LIPO
B/F : 0%
```

6.22 Receiver Settings -i-BUS Settings FS-CEV04

The i-BUS setting function is a unique and powerful serial communication protocol system provided by FLYSKY. It can be output to any channel by setting. For receivers with i-BUS interface and corresponding accessories, see the description of serial bus receivers for details.

Function settings:

1. The transmitter and receiver are completed successfully;
2. Connect the input cable of the i-BUS receiver to the SERVO port of the receiver;
3. Connect the servo to the C1-C4 ports of the i-BUS receiver;
4. Turn on the transmitter to enter the i-BUS setting interface, and select the channel to be assigned; if the channel Note: If the interface prompts to set the RF type to "ANT bidirectional" first, set the RF type to ANT bidirectional first.
5. Press the corresponding button on the i-BUS receiver. After the setting is successful, the system will pop up a pop-up window showing the interface number of the currently selected channel assigned to the i-BUS receiver.
6. Repeat the above steps to set more channels.

Note: If the receiver is overloaded, please supply power separately to prevent the wire from being burnt out due to excessive current.

```
(i-BUS SET) ASSIGNING... (i-BUS SET)
[OK] PRESS THE CORRESPON CH3
CH3 PRESS THE CORRESPON CH4
CH4 PRESS THE CORRESPON CH5
CH5 PRESS THE CORRESPON CH6
[OK] PRESS THE CORRESPON CH7
```

6.23 Model

The Model menu is used for model management. It includes four options: select model, model name, copy model and reset model.

Select model: The transmitter can save up to 20 sets of model data, and you can call out one set of model data at any time and use it as needed.


Model name: The name of the model you select can be edited and changed.

Copy model: If you have a new model that is the same or similar to the model you used before, you can use this function to make a copy for quick setting.

Reset model: It literally means that this function will reset all the set values of the model parameters and restore the factory settings.

Function settings:

1. In the Model menu, select the item to be set by pressing the UP/DOWN key and press the OK key to enter the corresponding function submenu.
2. If the Select Model option is selected, you can choose the desired model number by pressing the UP/DOWN key and press the OK key for confirmation. At this time, a dialog box will pop up. Then just select YES by pressing the UP/DOWN key and press the OK key for confirmation.
3. If the Model Name option is selected, you can choose the desired letters or digits by pressing the UP/DOWN key for editing. After the selection is finished, press the OK key to return.
4. If the Copy Model option is selected, you can choose the model to be copied by pressing the UP/DOWN key and press the OK key for confirmation. Then choose the model number for copy by pressing the UP/DOWN key and press the OK key for confirmation. Finally select YES and press the OK key for confirmation.
5. If the Reset Model option is selected, a dialog box will pop up. Just select YES by pressing the UP/DOWN key and press the OK key for confirmation.

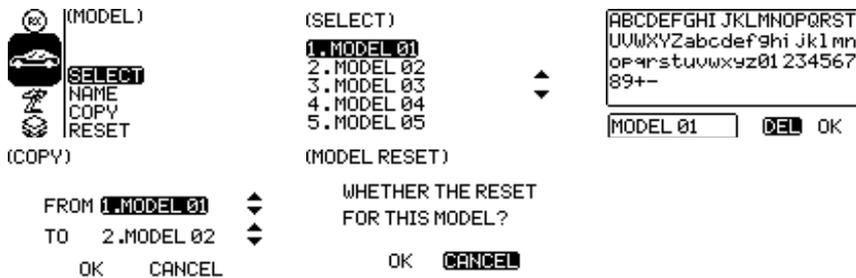

6.24 System Settings

The System menu includes six function submenus, i.e., system settings, stick calibration, firmware update, factory reset, help center and about.

Function settings:

In the System menu, select the item to be set by pressing the UP/DOWN key and press the OK key to enter the corresponding function submenu.



6.25 System Settings - System Settings

The system setting function is used to set the transmitter system, including setting the language, idle alarm time, battery type, display contrast & brightness, LED light, system sound and volume.

Description of battery type:

AA battery means a widely-used R6 alkaline dry battery. 2S means two lithium-ion cells, which are non-standard specialized battery. Please consult specialists before use to avoid error alarms or dangers of over-discharge or over-heating! No other batteries are recommended.

Function settings:

In the System Setting menu, select the item to be set by pressing the UP/DOWN key and press the OK key for editing. Set the desired value by pressing the UP/DOWN key and press the OK key to confirm the adjustment.

(SYSTEM)		(SYSTEM)	
LANGUAGE : ENGLISH	▲	BATTERY : AA BATTERY	▲
IDLE ALARM : 5MIN	▲	LCD : 10	▲
BATTERY : AA BATTERY	▲	LED : ON	▲
LCD : 10	▲	SOUND : SYS+ALA	▲
LED : ON	▲	VOLUME : 20%	▲

6.26 System Settings - Stick Calibration

The stick calibration function is used to restore the data of the neutral position and endpoints, which are changed for certain reasons after the transmitter has been used for a long time. The ST, TH and VR2 channels can be recovered by using this function please refer to the chapter for stick calibration.

Function settings:

1. In the Stick Calibration menu, turn the direction handwheel left and right to the maximum and return it to the neutral position; pull the trigger back and forth and return it to the neutral position; then turn VR2 left and right to the maximum and return it to the neutral position; and finally press the OK key to confirm the calibration.
2. Carry out a test to confirm that all channel outputs set after calibration are functioning as expected.

(CALIBRATION)		(CALIBRATION)
PRESS START TO ADJUST ST	(摇杆校准)	ST
TH VR2 TO MAX MIN IN WHICH	方向	TH
THE VR2 NEEDS TO MID OF	油门	VR
RELEASE CAN BE RETURN?	VR2	FAIL!
		AGAIN CANCEL

6.27 System Settings - Firmware Update

The firmware update function is used for synchronizing the system to the latest version and experiencing better functions and services when the firmware is upgraded by the manufacturer.

Function settings:

Note: This function is only available in the FlySky Assistant software provided by FLYSKY.

1. In the Firmware Update menu, a dialog box will pop up. At this time, you can select YES by pressing the UP/DOWN key and press the OK key to start the update session. The current menu will be closed directly once the update session is completed.

2. Carry out a test to confirm that the transmitter functions normally after the update.

Note: Always ensure sufficient power supply for the transmitter when using this function.

(TX UPDATE)		UPDATING...
MAKE SURE THE BATTERY IS		DO NOT OPERATE!
CHARGED!		
CONFIRM UPDATE FIRMWARE		
?		
OK		CANCEL

6.28 System Settings - Factory Reset

The factory reset function is used to restore the entire transmitter system to the factory settings in case a number of parameters are adjusted incorrectly during operation.

Function settings:

1. In the Factory Reset menu, a dialog box will pop up. At this time, you can select YES by pressing the UP/DOWN key and press the OK key to reset the transmitter. The current menu will be closed automatically once the resetting process is completed.

2. Carry out a test to confirm that the transmitter functions normally after it is reset.

Note: When activating this function, all parameters will be reset, including the model data you have saved before. It is important to back up the data first if necessary. For details, please refer to the relevant functions of FlySky Assistant.

(FACTORY)
CONFIRM THAT ALL MODEL
SETTING ARE RESTORED!

OK

CANCEL

6.29 System Settings - Help Center

The Help Center provides a QR code of the user manual. You can use your mobile phone to scan the QR code to retrieve the information you want to know. It enables you to quickly access the electronic version of the user manual if there is no hard copy in hand. You can also find the company website and official media accounts in this menu which may facilitate interactive communication between FLYSKY and customers in future.

(HELP)

MANUAL
MORE

6.30 System Settings - About

The About function submenu is used to display the system firmware and hardware information which can be referred to for future maintenance purposes.

TYPE : FS-G7P
FW : 1.0.0.19
TIME : 2021-12-29
HW : 1.5
RF : 1.0

7.FS-R7P Function Instructions

FS-R7P based on ANT protocol is a receiver which provides seven channels. It has an external single antenna, can output PWM or PPM/i-BUS/S.BUS signal. It has a compact design. It can be adapted to a variety of model cars or boats.

Note: See [2.3 Receiver Overview] for interface Introduction details.

7.1 Attentions

- Make sure the product is installed and calibrated correctly, failure to do so may result in serious injury.
- Make sure the receiver's battery is disconnected before turning off the transmitter, failure to do so can result out of control.
- Unreasonable setting of the Failsafe may cause accidents.
- Make sure the receiver is mounted away from motors, electronic speed controllers or any device that emits excessive electrical noise.
- Keep the receiver's antenna at least 1cm away from conductive materials such as carbon or metal.
- Do not power on the receiver during the setup process to prevent loss of control.

7.2 Binding

If you need to re-bind the receiver, please refer to [4.2 Bind] for the steps.

Notes:

1. Set the transmitter to its binding state first, and then set the receiver to its binding state. If the binding is not completed within 10s, the indicator light of the receiver will enter its slow flashing state.
2. If re-binding is successful, all the settings of the car lights will be restored to their default values.

7.3 Firmware update

The firmware of this receiver is updated through the FlyskyAssistant (Only version 3.0 or above is supported. The firmware of FlyskyAssistant is available on the Flysky official website).

This receiver can be updated via the following two ways:

1. After the binding between the transmitter and the receiver (the LED of the receiver is solid on), connect the transmitter to the computer, then open the FlyskyAssistant on the computer to update the firmware.
 2. Connect the transmitter to the computer. Then put the receiver to enter the forced update mode by referring to the following three ways (The LED of the receiver operates in three-flash-one-off manner repeatedly). Afterwards, open the FlyskyAssistant on the computer to update the firmware.
- Power on the receiver while pressing and holding the BIND button for more than ten seconds, until the LED of the receiver operates in threeflash-one-off manner repeatedly, then release the BIND button.

- Power on the receiver first, then press and hold the BIND button for more than ten seconds, when the LED of the receiver operates in threeflash-one-off manner repeatedly, then release the BIND button.
- Connect the bind cable to the signal pins of the CH4 and CH6, then power on the receiver

Notes: The method of activating the binding or mandatory updating function may vary according to the type of receiver. For details, please refer to the user manual of the corresponding receiver.

7.4 Failsafe

The failsafe function is used to output the channel value according to the out-of-control protection value set by the user after the receiver loses its signal and is out of control to protect the model and personnel.

It can also be set failsafe for each channel respectively. This receiver supports two failsafe modes: [ON] and [OFF] [OFF] It is no output for the interface of PWM.

[ON] Outputs the failsafe values set for each channel.

Notes:

1. For bus signal types such as PPM/i-BUS/S.BUS, a single or several of these channels are not allowed to be in [No output] mode. The actual signal is held at the last output value when the channel is set to [No output] mode.
2. Because the S.BUS signal information contains failsafe flag bits, the failsafe settings of each channel are communicated to subsequent devices by the failsafe flag bits. If the connected devices support the failsafe flag bit analysis, the failsafe values set for each channel are output after out of control.
3. For the signal PPM/i-BUS without failsafe flag bits, it supports the setting of the signal to [No output] mode in case of out of control. After setting to [No output] mode, regardless of the setting of the failsafe of each channel, each channel will be in [No output] mode after out of control.

8. Product Specifications

This chapter contains the specifications of FS-G7P transmitter and FS-R7P receiver.

8.1 Transmitter Specification FS-G7P

Model Type	Cars, Boats
Channels	7
RF Frequency	2.4GHz ISM
2.4G Protocol	ANT
Maximum Power	<20dBm (e.i.r.p.) (EU)
Reception Sensitivity	≤ -99dBm
Channel Resolution	1024
Low Voltage Warning	YES
Input power	4-9V/DC
Battery	1.5AA*4/2S Lipo (JST)
Data Output	Type-C Interface
Charging Interface	NO
Antenna Type	Built-in single coaxial cable antenna
Display Mode	128*64 LCD (Black and white dot matrix screen)
Online Update	FlySky Assistant Update
Distance	≥ 300m (Ground)
Working Current	About 110mA/6V
Temperature Range	-10°C ~+60°C
Humidity Range	20-90%
Size	136.4*111.8*197.5mm
Weight	305g
Certification	CE, FCC ID:N4ZG7P00

8.2 Receiver Specification FS-R7P

Channels	7
RF Frequency	2.4GHz ISM
2.4G Protocol	ANT
Reception sensitivity	≤ -99dBm
Maximum Power	< 20dBm (e.i.r.p.) (EU)
Input power	3.5-9V/DC
Distance	≥ 300m (Ground)
Temperature Range	-10°C ~+60°C
Humidity Range	20-90%
Online Update	FlySky Assistant Update
Antenna Type	External single antenna
Weight	8g
Size	35*23.3*13.3mm
Certification	CE, FCC ID:2A2UNR7P00

9. Packing List

Transmitter*1 (FS-G7P)

Receiver*1 (FS-R7P)

10. Certification

10.1 DoC Declaration

Hereby, [Flysky Technology co., ltd] declares that the Radio Equipment [FS-G4P] is in compliance with RED 2014/53/EU.

The full text of the EU DoC is available at the following internet address: www.flysky-cn.com.

10.2 CE Warning

The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

10.3 Appendix 1 FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

1. The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.
2. Move all your channels to the desired position.
3. Select [All channels] and then [Yes] in the confirmation box.

11. Environmentally friendly disposal

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort, you contribute to recycle valuable raw materials and the treatment of toxic substances.



CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS



www.flysky-cn.com

Copyright ©2022 Flysky Technology Co.,Ltd

Date:2022-01-19



FCC ID:N4ZG7P00

FCC ID:2A2UNR7P00